


AXIS Quick-Start Guide – Getting Started



Welcome!

This Quick-Start Guide will walk you through how to get connected to and manage your AXIS for use on Altec manufactured machines. Before using AXIS, get started by obtaining and registering your user credentials and verifying mobile device compatibility. More information is available at www.altec.com/axis

What's in the box?

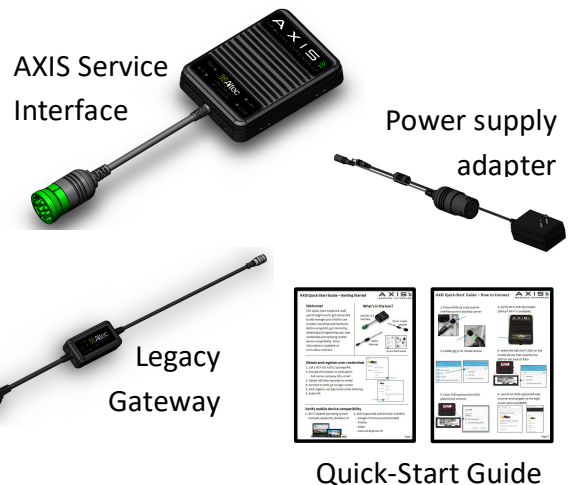

Obtain and register user credentials

1. Go to altec.com/axis/activation
2. Complete the online form and submit
3. Obtain AXIS key via email or verbal
4. Connect to AXIS, go to login screen
5. Click register, set password, enter AXIS key
6. Select OK
7. Log in with password

Reset or Register Account

Altec

Username:
Enter your user name

Choose Password:
Choose a password

Repeat Password:
Valid

Key:
AZVPBJ8YRQTM46PSNU5PBV869NKGVP9U7SDR2V2MVEG8S46ZYP7J47
CBZ4RYXGEQUVF3ZYRKJXESR6J8CBPBM5BQP72V6XW5742ARAWC5
GFE2DH

Enter your key

Ok Cancel

Login

Altec

Username:
Username
Enter your user name

Password:
Password
Enter your password

Login

Lost password | Register

Verify mobile device compatibility

1. Wi-Fi capable operating system
 - Android, Apple iOS, Windows 7+
2. AXIS supported web browser installed
 - Google Chrome (recommended)
 - Firefox
 - Safari
 - Internet Explorer 9+




074960126-C

Page 1

AXIS Quick-Start Guide – How to Connect




1. Power AXIS via truck system interface ports or auxiliary power

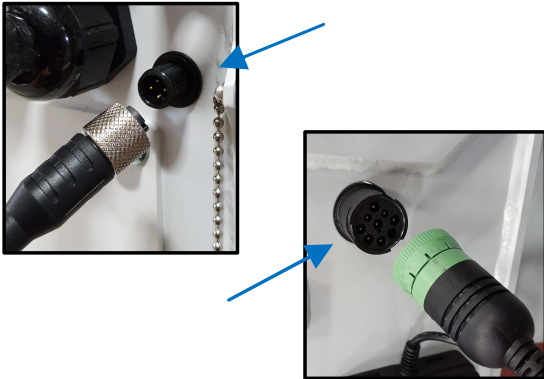


2. Verify Wi-Fi LED illuminates (blinks if Wi-Fi is available)



3. Enable Wi-Fi on mobile device

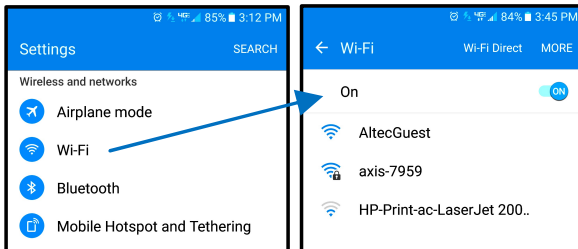


4. Select the AXIS Wi-Fi SSID on the mobile device that matches the SSID on the back of AXIS

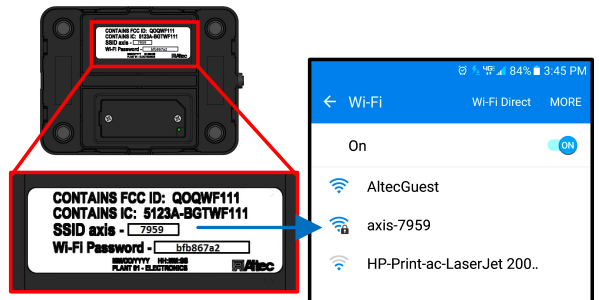

5. Enter SSID password on AXIS placard and connect



6. Launch an AXIS supported web browser and navigate to the login screen (axis.local:8080) and log in

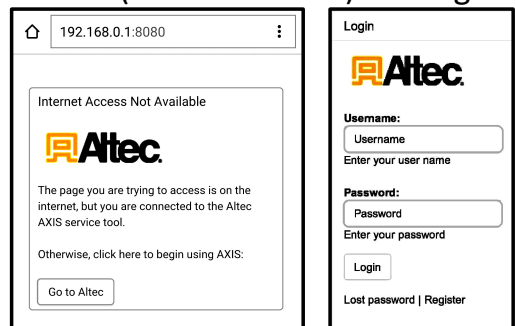

074960126-C